

NPSM501 Series – Single phase / DC input switching power supply






■ **Main Features:**

- High efficiency
- Ultra compact size
- Overload 150%
- Up to 45°C operating temperature with no derating
- Constant current or Hiccup mode limitation, user settable
- Easy parallelable for power increase
- Natural convection cooling

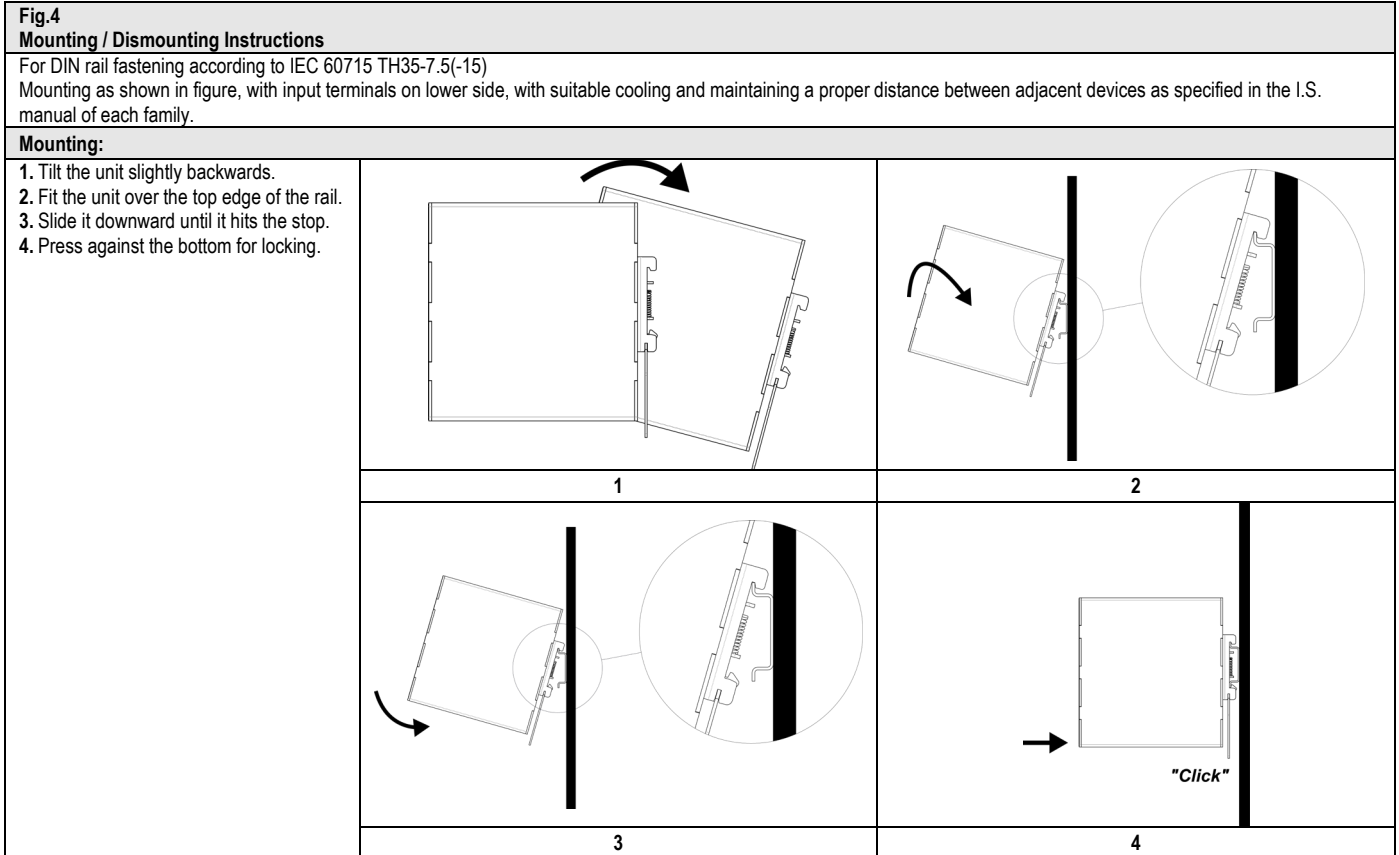
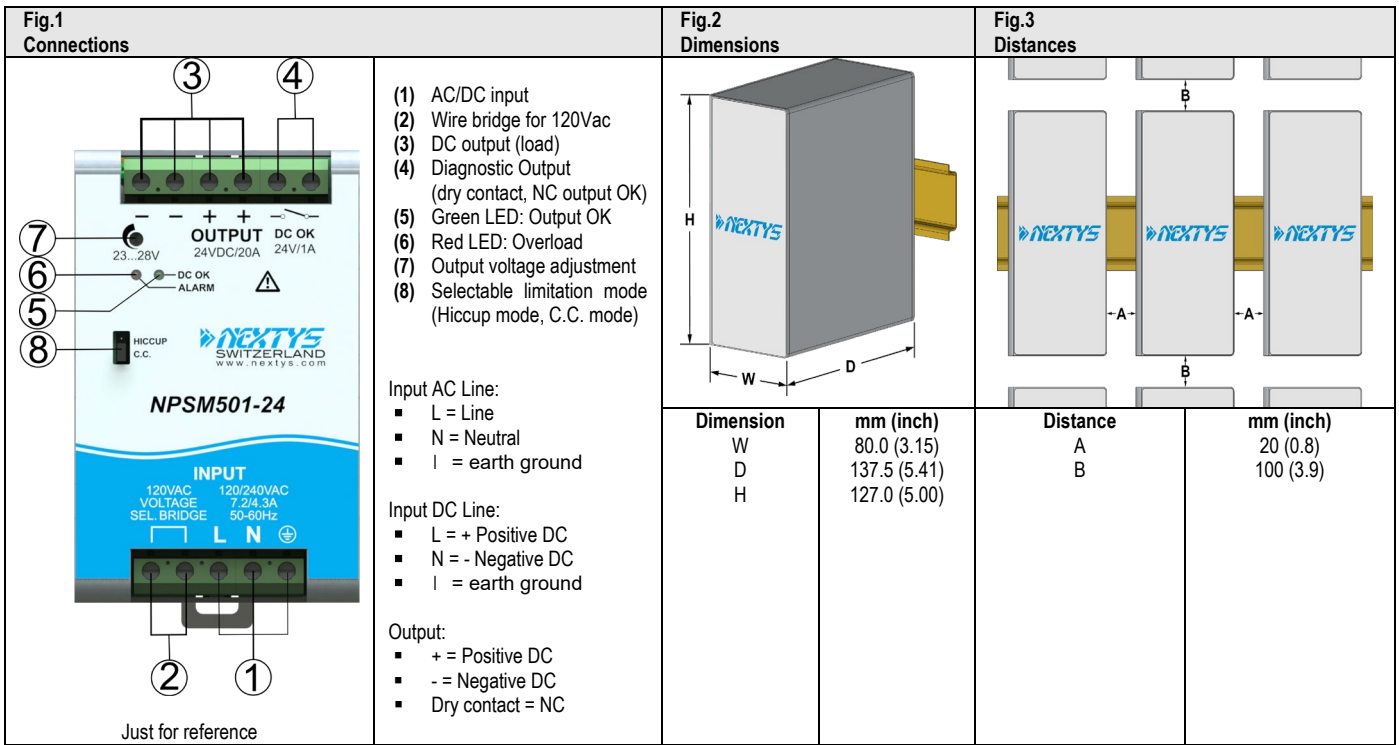


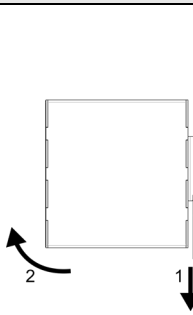
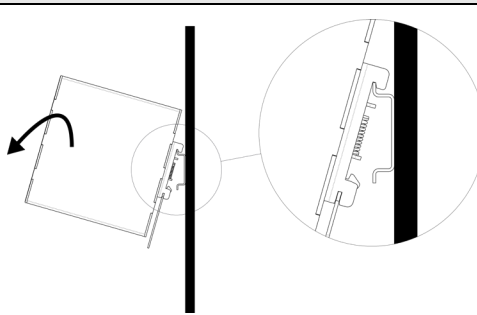
INDEX	
	Page
Installation Requirements	2
Declaration of Conformity	2
User Instructions	3
Connections	4
Dimensions	4
Distances	4
Mounting	4
Dismounting	5
Input Connections	5
Environment	5
Accessory Device	5

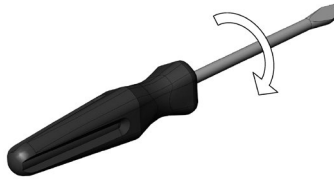
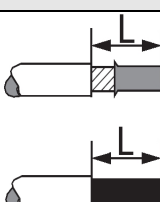
READ THIS CAREFULLY BEFORE INSTALLATION!	LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE!	A LIRE ATTENTIVEMENT AVANT L'INSTALLATION!
<p>Before operating, read this document thoroughly and retain it for future reference. Non-respect of these instructions may reduce performances and safety of the devices and cause danger for people and property. The products must be installed, operated, serviced and maintained by qualified personnel in compliance with applicable standards and regulations. Don't open the device, it does not contain replaceable components, the tripping of the internal fuse (if included) is caused by an internal failure. Don't repair or modify the device, if malfunction or failure should occur during operation, send unit to the factory for inspection. No responsibility is assumed by Nextys SA for any consequences deriving from the use of this material.</p>	<p>Prima dell'installazione, leggere attentamente questo documento istruzioni e conservarle per future consultazioni. L'inosservanza delle presenti istruzioni può compromettere le caratteristiche e la sicurezza dell'apparecchio e causare pericolo per le persone e le cose. Il prodotto deve essere installato, utilizzato e riparato da personale qualificato e nel rispetto delle normative vigenti. Non aprire il prodotto, esso non contiene componenti sostituibili, il guasto del fusibile interno (se previsto) è causato da un guasto interno. Non tentare di riparare o modificare il prodotto, se durante il funzionamento si verificano guasti o anomalie, inviarlo al produttore per il controllo. Nextys SA non si assume nessuna responsabilità per qualunque conseguenza derivante dall'uso di questo materiale.</p>	<p>Lisez ces instructions avant l'installation, conservez ce manuel pour référence future. Défaut de se conformer à ces instructions peut affecter les caractéristiques et la sécurité du dispositif de danger et de causer aux personnes ou aux biens. Les produits doivent être installés, exploités et entretenus par personnel qualifié et en conformité avec les règlements. N'ouvrez pas le produit, il ne contient aucune pièce réparable, le déclenchement du fusible interne (le cas échéant) est causé par un défaut interne. Ne pas essayer de réparer ou modifier le produit ; si des défaillances se produisent pendant le fonctionnement ou les dysfonctionnements, le retourner au fabricant pour inspection. Nextys SA n'assume aucune responsabilité des conséquences éventuelles découlant de l'utilisation des produits.</p>
CAUTION	ATTENZIONE	AVVERTISSEMENT
<p><b>RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL SHOCK, PERSONAL INJURY.</b> Never carry out work on live parts! Danger of fatal injury! The product's enclosure may be hot, allow time for cooling product before touching it. Do not allow liquids or foreign objects to enter into the products. To avoid sparks, do not connect or disconnect the device before having previously turned-off input power and wait for internal capacitors discharge (minimum 1 minute).</p>	<p><b>RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA, LESIONI GRAVI.</b> Non effettuare mai operazioni sulle parti sotto tensione! Pericolo di lesioni letali! Il contenitore può scottare, lasciar quindi raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi o oggetti estranei nel dispositivo. Per evitare scintille, non collegare o scollegare l'apparecchiatura prima di avere tolto tensione di ingresso e prima che sia avvenuta la scarica dei condensatori interni (min. 1 minuto).</p>	<p><b>RISQUE DE BRULURES, EXPLOSION, INCENDIE, ELECTROCUTION, DOMMAGE AUX PERSONNES.</b> Ne jamais effectuer des opérations sur les parties sous tension! Danger de mort! Le récipient peut produire des brulures, le laisser refroidir avant de toucher l'appareil. Ne faites pas pénétrer des liquides ou des corps étrangers dans l'appareil. Pour éviter des étincelles, ne pas connecter ou déconnecter l'équipement jusqu'à ce que vous avez supprimé la tension d'entrée et avant qu'elle n'ait lieu de décharge des condensateurs internes (minimum 1 minute).</p>

DECLARATION OF CONFORMITY				
		<p><b>NEXTYS SA.</b> Via Luserte Sud 6, 6572 Quartino - Switzerland Phone: +41-(0)91 840 14 46 / 840 14 48; Fax: +41-(0)91 840 14 47 E-mail: info@nextys.com</p>		
<p>This Declaration of Conformity is suitable to the European Standard EN45014 "General criteria for supplier's declaration of conformity". We declare under our sole responsibility that the device included in this box, has passed all processing inspections and the final test and it is in conformity with the product requirements, including all reference codes and supply specifications.</p>				
<p><b>ROHS compliance:</b> the product respects the EC requirements related to ROHS substances, according to "Restriction of Hazardous Substances" as per document 2011/65/UE <b>REACH compliance:</b> the product respects the EC requirements related to REACH SVHC directive (2015) <b>Note:</b> all the reported information comes from our suppliers, NEXTYS SA. has not run any test to evaluate if the specific elements are present.</p>				
<p>All indicated devices are designed according to the latest Reference standards, if not expressly indicated through the official documents or files, they have been tested through our internal pre-compliance testing. Consult directly on www.nextys.com the reference standards applied to each model.</p>				
<p><b>Code</b></p> <p>NPSM501-24 NPSM501-48 NPSM501-72</p>	<p><b>Description</b></p> <p>Single phase switching power supply IN 120 / 240Vac (270 - 345Vdc) / OUT 24Vdc - 20A Single phase switching power supply IN 120 / 240Vac (270 - 345Vdc) / OUT 48Vdc - 10A Single phase switching power supply IN 120 / 240Vac (270 - 345Vdc) / OUT 72Vdc - 6.7A</p>			
<p><b>Certifications and approvals</b></p>				
<p><b>Reference standards</b></p>	<p>2014/35/EU (2014) 2014/30/EU (2014) EN61010-1 EN61010-2-201 UL508 EN61000-6-2:2005 - EN61000-4-2:2008 - EN61000-4-3:2006 /A2:2010 - EN61000-4-4:2012 - EN61000-4-5:2014 - EN61000-4-11:2004 /A1:2010 EN61000-6-3:2007 /A1:2011 - EN55022:2010 - EN55011:2009 /A1:2010</p>			
		<p>(Low Voltage Directive) (EMC directive) (Safety Standard) (Safety Standard) (Certified - IND. CONT. EQ. 4WX9 file no. E356563) (Generic immunity standard for industrial environments) (Electrostatic discharge immunity test) (Radiated, radio-frequency, electromagnetic field immunity test) (Electrical fast transient/burst immunity test) (Surge immunity test) (Voltage dips, short interruptions and voltage immunity test) (Generic emission standard for residential environments) (CISPR22 - EMC) (CISPR11 - EMC)</p>		

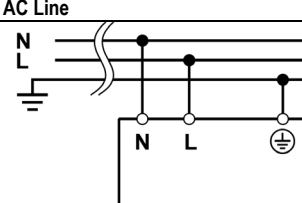
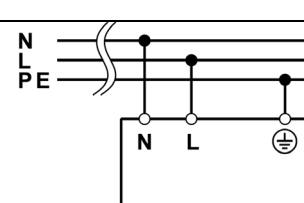
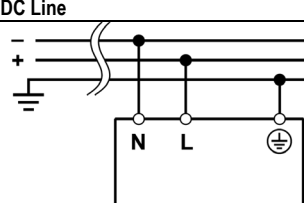
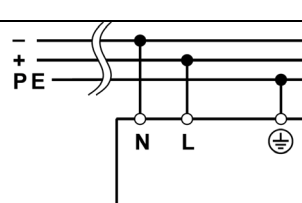
USER INSTRUCTIONS
<p><b>1) Description:</b> DIN rail mountable primary switched-mode power supply with 90...132Vac if the "120VAC Voltage Sel. Bridge" <b>is connected</b>, and 187...264Vac if the "120VAC Voltage Sel. Bridge" <b>is not connected</b>; 270...345Vdc input if the "120VAC Voltage Sel. Bridge" <b>is not connected</b>, suitable for Single phase main line and DC line.</p>
<p><b>2) Installation:</b> use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3). The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping. The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8)</p>
<p><b>3) Connections:</b> the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute) In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures of: 60°C for ambient up to 45°C 75°C for ambient up to 60°C 90°C for ambient up to 70°C Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5)</p>
<p><b>4) Input protection:</b> the device input is provided with varistors against overvoltage. Input is not provided with internal fuses, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6). For operation on a single-phase system, a protection fuse on the phase must be provided. <b>Surge protection:</b> it is strongly recommended to provide external surge arresters (SPD) according to local regulations.</p>
<p><b>5) AC input connection:</b> the device can be connected to single-phase AC lines with <math>U_{in}</math> 120Vac or 240Vac (see Fig.7). Please connect first the PE. <b>Need attention, set correctly the Input "120VAC Voltage Sel. Bridge" based on the input voltage used.</b></p>
<p><b>6) DC input connection:</b> connect L terminal to (+) positive pole, N terminal to (-) negative pole and I terminal to GND. Rated voltage 270...345Vdc. <b>Need attention, not connect the Input "120VAC Voltage Sel. Bridge" when it use in DC.</b> The device is also suitable for photovoltaic or wind turbine applications (see Fig.7).</p>
<p><b>7) Output connection:</b> The device is suitable for SELV and PELV circuitry. Pay attention NPSM501-72 is not SELV. <math>U_{out}</math> can be adjusted with a potentiometer to a wide range (see Fig.1) Check <math>U_{out}</math> before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power.</p>
<p><b>8) Parallel connection and redundancy:</b> power supplies can be connected in parallel to increase power. For paralleling for power set the Ilim jumper to C.C. algorithm. <math>U_{out}</math> must be set uniformly (<math>\pm 100mV</math>) on each power supply and the wiring must be symmetrical to ensure an equal current distribution. For redundant connection, use an external isolating device must be used (see accessory device).</p>
<p><b>9) Output protection:</b> the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). <b>OL and SC:</b> are controlled by a hiccup mode or a constant current (C.C.) mode protection with the following behaviour. <b>The Hiccup mode or C.C. mode are selectable with Jumper (see Fig.1)</b> <b>OL behaviour in hiccup mode:</b> max. <math>OL = 1.5 \times I_n</math> the output voltage remains constant at nominal voltage for about 5s and after that time the device starts an ON/OFF cycle. <b>OL behaviour in CC mode:</b> max. <math>OL = 1.5 \times I_n</math> the output voltage remains constant at nominal voltage for about 5s and after that time the device limits the current at <math>I_n</math>. If the load resistance is further decreased the output voltage starts to drop. The device never switches OFF. <b>SC behaviour in hiccup mode:</b> the device supplies <math>1.5 \times I_n</math> for about 5s and after that time the device starts an ON/OFF cycle. <b>SC behaviour in CC mode:</b> the device supplies <math>1.5 \times I_n</math> and the output voltage drops to a level depending on the impedance of the failed load circuit. After 5s the current is limited to <math>I_n</math>. The device never switches OFF. <b>Output OV circuit protection:</b> the output is protected against potential OV due to internal malfunction or coming from the load for <math>U_{out} \geq U_{nom} \times 1.2...1.4</math>, depending on the model. <b>OT protection:</b> turns off the device if the internal temperature exceeds a safe limit. The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8).</p>
<p><b>10) Feeding DC motors:</b> it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device). For these applications the C.C. (Constant Current) mode of current limitation is recommended. <b>NOTE:</b> motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.</p>
<p><b>11) Operation with Battery:</b> when a battery is connected in parallel to the Output for backup purposes; the NPSM501 must be set on C.C. mode to avoid battery over-charging (see accessory device).</p>



<b>Dismounting:</b>		
<ol style="list-style-type: none"> <li>1. Pull down the slide clamp lever</li> <li>2. Tilt the unit upward</li> <li>3. Unhook the unit from the rail</li> </ol>	 <p>1 &amp; 2</p>	 <p>3</p>

<b>Fig.5</b>			
<b>Recommended connecting cable</b>			
	<p><b>Recommended Tightening torque</b> 0.8/1.0Nm 7.0/8.85 lbf in</p>		<p>Solid: 6.0mm<sup>2</sup> / 10AWG Stranded: 4.0mm<sup>2</sup> / 10AWG L: 7.0 – 8.0mm / 0.28 - 0.31in</p>

<b>Fig.6</b>	
<b>Input protection</b>	
Fuse AT 16A or MCB 16A C curve. For USA and Canada, use the fuse type closest to the European equivalent type.	
<b>Surge protection:</b> it is strongly recommended to provide external surge arresters (SPD) according to local regulations.	

<b>Fig.7</b>			
<b>Input connections</b>			
<b>AC Line</b>		<b>DC Line</b>	
			

<b>Fig.8</b>	
<b>Environment</b>	
<b>Operating temperature</b>	<b>Derating</b>
- 40°C...70°C 5...95% r.H. non condensing UL Certified up to 45°C Overtemperature protection	- 7.2W/°C over 45°C

<b>Note:</b>
<ul style="list-style-type: none"> <li>Data may change without prior notice in order to improve the product.</li> <li>Please refer to the latest version of the "Instruction Manual" for each product by visiting <a href="http://www.nextys.com">www.nextys.com</a></li> </ul>

<b>See also the products below that can be used in conjunction with NPSM501 units:</b>		<i>(accessory device)</i>
<ul style="list-style-type: none"> <li>OR20 20A Active ORing controller</li> <li>OR50 50A Active ORing controller</li> <li>DCU20 20A High performance DC UPS</li> <li>BU150U 150J Buffer Module</li> <li>NUPS12/24 Battery charger and DC UPS Module</li> <li>MBC2K 2000W Motor brake controller</li> <li>NBP30 Sealed Lead acid Battery pack</li> </ul>		