

NDD3-1205 – 3W DIN Rail DC/DC converter





■ Main Features:

-) High efficiency and compact size
-) Plastic enclosure, circuit breaker shape
-) Overload 150%
-) Up to 70°C operating temperature



| INDEX | |
|---------------------------|------|
| | Page |
| Installation Requirements | 2 |
| Declaration of Conformity | 2 |
| User Instructions | 3 |
| Connections | 4 |
| Dimensions | 4 |
| Distances | 4 |
| Mounting | 4 |
| Dismounting | 5 |
| Input Connections | 5 |
| Environment | 5 |
| Accessory Device | 5 |

| READ THIS CAREFULLY BEFORE INSTALLATION! | LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE! | A LIRE ATTENTIVEMENT AVANT L'INSTALLATION! |
|---|--|---|
| <p>Before operating, read this document thoroughly and retain it for future reference. Non-respect of these instructions may reduce performances and safety of the devices and cause danger for people and property. The products must be installed, operated, serviced and maintained by qualified personnel in compliance with applicable standards and regulations. Don't open the device, it does not contain replaceable components, the tripping of the internal fuse (if included) is caused by an internal failure. Don't repair or modify the device, if malfunction or failure should occur during operation, send unit to the factory for inspection. No responsibility is assumed by Nextys SA for any consequences deriving from the use of this material.</p> | <p>Prima dell'installazione, leggere attentamente questo documento istruzioni e conservarle per future consultazioni. L'inosservanza delle presenti istruzioni può compromettere le caratteristiche e la sicurezza dell'apparecchio e causare pericolo per le persone e le cose. Il prodotto deve essere installato, utilizzato e riparato da personale qualificato e nel rispetto delle normative vigenti. Non aprire il prodotto, esso non contiene componenti sostituibili, il guasto del fusibile interno (se previsto) è causato da un guasto interno. Non tentare di riparare o modificare il prodotto, se durante il funzionamento si verificano guasti o anomalie, inviarlo al produttore per il controllo. Nextys SA non si assume nessuna responsabilità per qualunque conseguenza derivante dall'uso di questo materiale.</p> | <p>Lisez ces instructions avant l'installation, conservez ce manuel pour référence future. Défaut de se conformer à ces instructions peut affecter les caractéristiques et la sécurité du dispositif de danger et de causer aux personnes ou aux biens. Les produits doivent être installés, exploités et entretenus par personnel qualifié et en conformité avec les règlements. N'ouvrez pas le produit, il ne contient aucune pièce réparable, le déclenchement du fusible interne (le cas échéant) est causé par un défaut interne. Ne pas essayer de réparer ou modifier le produit ; si des défaillances se produisent pendant le fonctionnement ou les dysfonctionnements, le retourner au fabricant pour inspection. Nextys SA n'assume aucune responsabilité des conséquences éventuelles découlant de l'utilisation des produits.</p> |
| CAUTION | ATTENZIONE | AVVERTISSEMENT |
| <p>RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL SHOCK, PERSONAL INJURY. Never carry out work on live parts! Danger of fatal injury! The product's enclosure may be hot, allow time for cooling product before touching it. Do not allow liquids or foreign objects to enter into the products. To avoid sparks, do not connect or disconnect the device before having previously turned-off input power and wait for internal capacitors discharge (minimum 1 minute).</p> | <p>RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA, LESIONI GRAVI. Non effettuare mai operazioni sulle parti sotto tensione! Pericolo di lesioni letali! Il contenitore può scottare, lasciar quindi raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi o oggetti estranei nel dispositivo. Per evitare scintille, non collegare o scollegare l'apparecchiatura prima di avere tolto tensione di ingresso e prima che sia avvenuta la scarica dei condensatori interni (min. 1 minuto).</p> | <p>RISQUE DE BRULURES, EXPLOSION, INCENDIE, ELECTROCUTION, DOMMAGE AUX PERSONNES. Ne jamais effectuer des opérations sur les parties sous tension! Danger de mort! Le récipient peut produire des brulures, le laisser refroidir avant de toucher l'appareil. Ne faites pas pénétrer des liquides ou des corps étrangers dans l'appareil. Pour éviter des étincelles, ne pas connecter ou déconnecter l'équipement jusqu'à ce que vous avez supprimé la tension d'entrée et avant qu'elle n'ait lieu de décharge des condensateurs internes (minimum 1 minute).</p> |

| DECLARATION OF CONFORMITY | | | |
|---|---|--|---|
|  | | <p>NEXTYS SA. Via Luserte Sud 6, 6572 Quartino - Switzerland Phone: +41-(0)91 840 14 46 / 840 14 48; Fax: +41-(0)91 840 14 47 E-mail: info@nextys.com</p> | |
| <p>This Declaration of Conformity is suitable to the European Standard EN45014 "General criteria for supplier's declaration of conformity". We declare under our sole responsibility that the device included in this box, has passed all processing inspections and the final test and it is in conformity with the product requirements, including all reference codes and supply specifications.</p> | | | |
| <p>ROHS compliance: the product respects the EC requirements related to ROHS substances, according to "Restriction of Hazardous Substances" as per document 2011/65/UE REACH compliance: the product respects the EC requirements related to REACH SVHC directive (EC) 1907/2006 Note: all the reported information comes from our suppliers, NEXTYS SA. has not run any test to evaluate if the specific elements are present.</p> | | | |
| <p>All indicated devices are designed according to the latest Reference standards, if not expressly indicated through the official documents or files, they have been tested through our internal pre-compliance testing. Consult directly on www.nextys.com the reference standards applied to each model.</p> | | | |
| Code | Description | | |
| NDD3-1205 | DC/DC converter IN 9 – 18Vdc / OUT 5Vdc – 0.6A | | |
| Certifications and approvals |  |  |  |
| Reference standards | 2014/35/EU 2014/30/EU EN60950-1 UL508 EN61000-6-2 - EN61000-4-2 - EN61000-4-3 - EN61000-4-4 - EN61000-4-5 - EN61000-4-11 EN61000-6-3 - EN55011 | (Low Voltage Directive) (EMC directive) (Safety Standards) (Safety Standards) (Generic immunity standard for industrial environments) (Electrostatic discharge immunity test) (Radiated, radio-frequency, electromagnetic field immunity test) (Electrical fast transient/burst immunity test) (Surge immunity test) (Voltage dips, short interruptions and voltage immunity test) (Generic emission standard for residential environments) (CISPR11 - EMC) | |

Date: 02.10.2018

Place: Quartino, Switzerland

The product manager

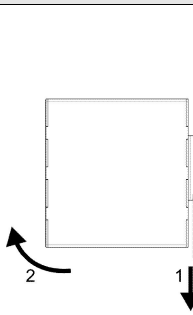
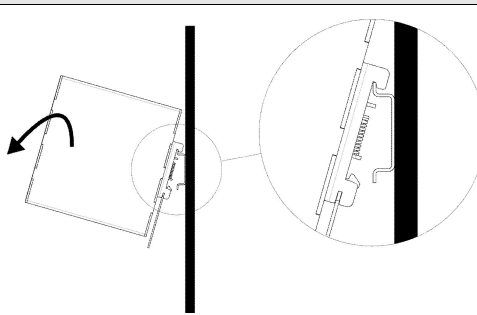


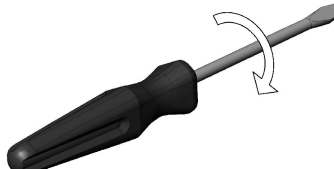
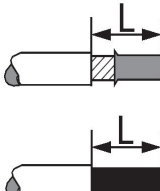
Marius Ciorica

| USER INSTRUCTIONS |
|--|
| <p>1) Description: DIN rail mountable DC/DC converter with 9...18Vdc. To prevent damage in case of reverse polarity, the device is protected by an internal fuse. The internal fuse is can not user replaceable. These DC/DC converter can be used in SELV and PELV circuits.</p> |
| <p>2) Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3). The device is provided with a thermal protection: a limited air flow can cause the thermal protection tripping. The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8)</p> |
| <p>3) Connections: the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute) Use appropriate copper cables of indicated cross section, designed for an operating temperatures of: 60°C for ambient up to 45°C 75°C for ambient up to 60°C 90°C for ambient up to 70°C Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5)</p> |
| <p>4) Input protection: the device input is provided with varistors against overvoltage. Input is provided with internal fuses 1.25AT/250Vac, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6).</p> |
| <p>5) DC input connection: connect (+) to positive pole, (-) to negative pole. Rated voltage 9...18Vdc. The device is also suitable for photovoltaic or wind turbine applications (see Fig.7).</p> |
| <p>6) Output connection: The device is suitable for SELV and PELV circuitry.</p> |
| <p>7) Parallel connection and redundancy: power supplies can be connected in parallel for redundancy connection, an external isolating device must be used (see accessory device).</p> |
| <p>8) Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). OL and SC: are controlled by a hiccup mode or a constant current (C.C.) mode protection with the following behaviour. Overload behaviour: Up to the overload limit (Ilim) there is no reduction of the output voltage. For currents >I_n but <I_{lim} the device operates continuously up to the intervention of the thermal protection. Short circuit behaviour: if I_{out}>I_{lim} the device enters into hiccup mode protecting the output and the connected load. OT protection: turns off the device if the internal temperature exceeds a safe limit. The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8).</p> |
| <p>9) Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device). For these applications the C.C. (Constant Current) mode of current limitation is recommended. NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.</p> |
| <p>10) Operation with Battery: when a battery is connected in parallel to the Output for backup purposes (see accessory device).</p> |

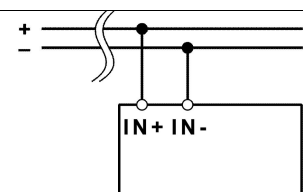
| Fig.1 Connections | Fig.2 Dimensions | Fig.3 Distances | | | | | | | | | | | | | | |
|--|--|--------------------|-----------|---|-----------|---|-------------|---|-----------|---|----------|-----------|---|----------|---|----------|
| <p>(1) DC input (2) DC output (load) (3) Green LED: Output OK</p> <p>Input DC Line: <ul style="list-style-type: none"> ■ += Positive DC (5) ■ -= Negative DC (6) </p> <p>Output: <ul style="list-style-type: none"> ■ += Positive DC (11) ■ -= Negative DC (12) </p> | <table border="1" data-bbox="683 660 1034 772"> <thead> <tr> <th>Dimension</th> <th>mm (inch)</th> </tr> </thead> <tbody> <tr> <td>W</td> <td>35 (1.38)</td> </tr> <tr> <td>D</td> <td>61.5 (2.42)</td> </tr> <tr> <td>H</td> <td>90 (3.54)</td> </tr> </tbody> </table> | Dimension | mm (inch) | W | 35 (1.38) | D | 61.5 (2.42) | H | 90 (3.54) | <table border="1" data-bbox="1034 660 1500 772"> <thead> <tr> <th>Distance</th> <th>mm (inch)</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>10 (0.4)</td> </tr> <tr> <td>B</td> <td>10 (0.4)</td> </tr> </tbody> </table> | Distance | mm (inch) | A | 10 (0.4) | B | 10 (0.4) |
| Dimension | mm (inch) | | | | | | | | | | | | | | | |
| W | 35 (1.38) | | | | | | | | | | | | | | | |
| D | 61.5 (2.42) | | | | | | | | | | | | | | | |
| H | 90 (3.54) | | | | | | | | | | | | | | | |
| Distance | mm (inch) | | | | | | | | | | | | | | | |
| A | 10 (0.4) | | | | | | | | | | | | | | | |
| B | 10 (0.4) | | | | | | | | | | | | | | | |

| Fig.4 Mounting / Dismounting Instructions | |
|---|--|
| <p>For DIN rail fastening according to IEC 60715 TH35-7.5(-15) Mounting as shown in figure, with input terminals on lower side, with suitable cooling and maintaining a proper distance between adjacent devices as specified in the I.S. manual of each family.</p> | |
| <p>Mounting:</p> | |
| <ol style="list-style-type: none"> 1. Tilt the unit slightly backwards. 2. Fit the unit over the top edge of the rail. 3. Slide it downward until it hits the stop. 4. Press against the bottom for locking. | |
| | |

| | | |
|---|--|---|
| Dismounting: | | |
| <ol style="list-style-type: none"> 1. Pull down the slide clamp lever 2. Tilt the unit upward 3. Unhook the unit from the rail |  <p>1 & 2</p> |  <p>3</p> |

| | | | |
|---|--|--|---|
| Fig.5 Recommended connecting cable | | | |
|  | <p>Recommended Tightening torque 0.8 Nm 7.8 lbf in</p> |  | <p>Solid: 2.5mm² / 12AWG Stranded: 1.5mm² / 12AWG L: 5.5-6.5mm / 0.22-0.26 in</p> |

| | |
|--|--|
| Fig.6 Input protection | |
| Fuse MCB 5A C curve. For USA and Canada, use the fuse type closest to the European equivalent type. | |
| Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations. | |

| | |
|---|--|
| Fig.7 Input connections | |
| DC Line | |
|  | |

| | |
|--|---------------------|
| Fig.8 Environment | |
| Operating temperature | Derating |
| - 40°C...70°C 5...95% r.H. non condensing | -0.08W/°C over 60°C |
| Overtemperature protection | |

| |
|---|
| Note: |
| <ul style="list-style-type: none"> ▪ Data may change without prior notice in order to improve the product. ▪ Please refer to the latest version of the "Instruction Manual" for each product by visiting www.nextys.com |

| | |
|---|--------------------|
| See also the products below that can be used in conjunction with NDD241 units: | (accessory device) |
| <ul style="list-style-type: none"> ▪ OR20 20A Active ORing controller | |