

NPSM501 Series – Single phase / DC input switching power supply



INDEX	
	Page
Installation Requirements	2
Declaration of Conformity	2
User Instructions	3
Connections	4
Dimensions	4
Distances	4
Mounting	4
Dismounting	5
Input Connections	5
Environment	5
Accessory Device	5



READ THIS CAREFULLY BEFORE INSTALLATION!	LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE!	A LIRE ATTENTIVEMENT AVANT L'INSTALLATION!
Before operating, read this document thoroughly and retain		Lisez ces instructions avant l'installation, conservez ce
it for future reference.	documento istruzioni e conservarle per future consultazioni.	manuel pour référence future.
Non-respect of these instructions may reduce	L'inosservanza delle presenti istruzioni può compromettere le	Défaut de se conformer à ces instructions peut affecter les
performances and safety of the devices and cause danger	caratteristiche e la sicurezza dell'apparecchio e causare	caractéristiques et la sécurité du dispositif de danger et de
for people and property.	pericolo per le persone e le cose.	causer aux personnes ou aux biens.
The products must be installed, operated, serviced and	Il prodotto deve essere installato, utilizzato e riparato da	Les produits doivent être installés, exploité et entretenus par
maintained by qualified personnel in compliance with		personnel qualifié et en conformité avec les règlements.
applicable standards and regulations.		N'ouvrez pas le produit, il ne contient aucune pièce réparable,
Don't open the device, it does not contain replaceable	5	le déclenchement du fusible interne (le cas échéant) est
components, the tripping of the internal fuse (if included) is	guasto interno. Non tentare di riparare o modificare il prodotto,	causé par un défaut interne. Ne pas essayer de réparer ou
caused by an internal failure.	se durante il funzionamento si verificano guasti o anomalie,	modifier le produit ; si des défaillances se produisent pendant
Don't repair or modify the device, if malfunction or failure		le fonctionnement ou les dysfonctionnements, le retourner au
should occur during operation, send unit to the factory for		fabricant pour inspection. Nextys SA n'assume aucune
inspection. No responsibility is assumed by Nextys SA for	qualunque conseguenza derivante dall'uso di questo materiale.	responsabilité des conséquences éventuelles découlant de
any consequences deriving from the use of this material.		l'utilisation des produits.
CAUTION	ATTENZIONE	AVVERTISSEMENT
RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL	RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA,	RISQUE DE BRULURES, EXPLOSION, INCENDIE,
SHOCK, PERSONAL INJURY.	LESIONI GRAVI.	ELECTROCUTION, DOMMAGE AUX PERSONNES.
Never carry out work on live parts! Danger of fatal injury!	Non effettuare mai operazioni sulle parti sotto tensione! Pericolo	Ne jamais effectuer des opérations sur les parties sous
The product's enclosure may be hot, allow time for cooling		tension! Danger de mort! Le récipient peut produire des
product before touching it. Do not allow liquids or foreign	raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi	brulures, le laisser refroidir avant de toucher l'appareil. Ne
objects to enter into the products.	o oggetti estranei nel dispositivo.	faites pas pénétrer des liquides ou des corps étrangers dans
To avoid sparks, do not connect or disconnect the device		l'appareil. Pour éviter des étincelles, ne pas connecter ou
before having previously turned-off input power and wait for	l'apparecchiatura prima di avere tolto tensione di ingresso e	déconnecter l'équipement jusqu'à ce que vous avez supprimé
internal capacitors discharge (minimum 1 minute).	prima che sia avvenuta la scarica dei condensatori interni (min.	la tension d'entrée et avant qu'elle n'ait lieu de décharge des
	1 minuto).	condensateurs internes (minimum 1 minute).

DECLARATION OF CONFORMITY



Date: 25.02.2016

Place: Quartino, Switzerland

The product manager

M Cinica

Marius Ciorica

(CISPR11 - EMC)

- EN55011:2009 /A1:2010



TDUC 110

USER INSTRUCTIONS
1) Description: DIN rail mountable primary switched-mode power supply with 90132Vac if the "120VAC Voltage Sel. Bridge" is connected, and 187264Vac if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc input if the "120VAC Voltage Sel. Bridge" is not connected; 270345Vdc
2) Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where
the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3).
The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping.
The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the
load (see Fig.8)
3) Connections: the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input
power and waited for internal capacitors discharge (minimum 1 minute)
In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures of: 60°C for ambient up to 45°C
75°C for ambient up to 60°C
90°C for ambient up to 70°C
Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5)
4) Input protection: the device input is provided with varistors against overvoltage. Input is not provided with internal fuses, thus an external short circuit/overcurrent protection
must be provided by the end user (see Fig.6).
For operation on a single-phase system, a protection fuse on the phase must be provided.
Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.
5) AC input connection: the device can be connected to single-phase AC lines with Uin 120Vac or 240Vac (see Fig.7). Please connect first the PE. Need attention, set correctly the Input "120VAC Voltage Sel. Bridge" based on the input voltage used.
6) DC input connection: connect L terminal to (+) positive pole, N terminal to (-) negative pole and L terminal to GND. Rated voltage 270345Vdc.
Need attention, not connect the Input "120VAC Voltage Sel. Bridge" when it use in DC.
The device is also suitable for photovoltaic or wind turbine applications (see Fig.7).
7) Output connection: The device is suitable for SELV and PELV circuitry. Pay attention NPSM501-72 is not SELV.
Uout can be adjusted with a potentiometer to a wide range (see Fig.1)
Check Uout before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power.
8) Parallel connection and redundancy: power supplies can be connected in parallel to increase power. For paralleling for power set the lim jumper to C.C. algorithm.
Uout must be set uniformly (±100mV) on each power supply and the wiring must be symmetrical to ensure an equal current distribution.
For redundant connection, use an external isolating device must be used (see accessory device).
9) Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). OL and SC: are controlled by a hiccup mode or a constant current (C.C.) mode protection with the following behaviour.
The Hiccup mode or C.C. mode are selectable with Jumper (see Fig.1)
OL behaviour in hiccup mode: max. OL = 1.5 x In the output voltage remains constant at nominal voltage for about 5s and after that time the device starts an ON/OFF cycle.
OL behaviour in CC mode: max. OL = 1.5 x In the output voltage remains constant at nominal voltage for about 5s and after that time the device limits the current at In. If the
load resistance is further decreased the output voltage starts to drop. The device never switches OFF.
SC behaviour in hiccup mode: the device supplies 1.5 x In for about 5s and after that time the device starts an ON/OFF cycle.
SC behaviour in CC mode: the device supplies 1.5 x In and the output voltage drops to a level depending on the impedance of the failed load circuit. After 5s the current is
limited to In. The device never switches OFF.
Output OV circuit protection: the output is protected against potential OV due to internal malfunction or coming from the load for Uout \geq Unom x 1.21.4, depending on the model.
OT protection: turns off the device if the internal temperature exceeds a safe limit.
The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load
(see Fig.8).
10) Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it
can trigger overcurrent protection (see accessory device). For these applications the C.C. (Constant Current) mode of current limitation is recommended.
NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.

11) Operation with Battery: when a battery is connected in parallel to the Output for backup purposes; the NPSM501 must be set on C.C. mode to avoid battery over-charging (see accessory device).



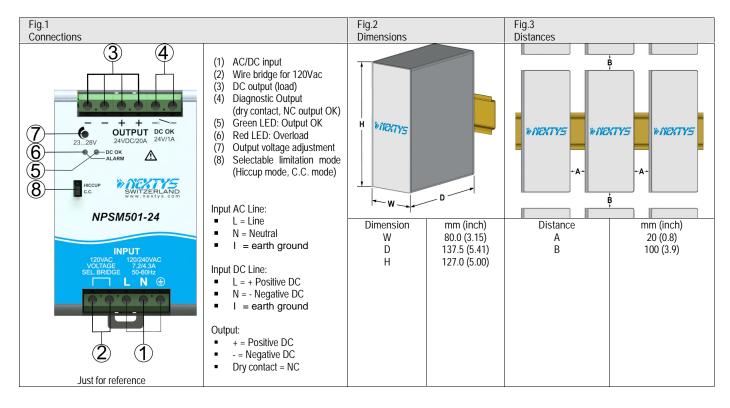


Fig.4

Mounting / Dismounting Instructions


For DIN rail fastening according to IEC 60715 TH35-7.5(-15)

Mounting as shown in figure, with input terminals on lower side, with suitable cooling and maintaining a proper distance between adjacent devices as specified in the I.S. manual of each family.

Mounting:


1. Tilt the unit slightly backwards.

- 2. Fit the unit over the top edge of the rail.
- 3. Slide it downward until it hits the stop.
- 4. Press against the bottom for locking.

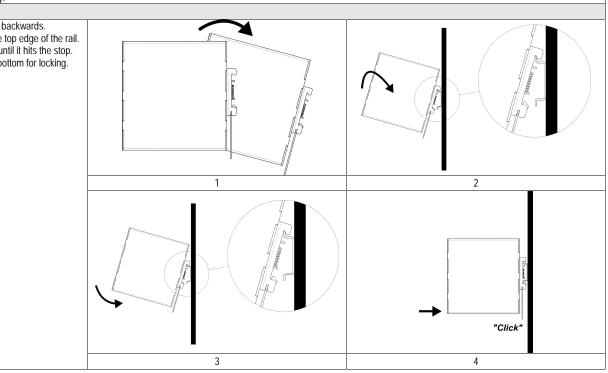

NPSM501 Series Instruction Manual



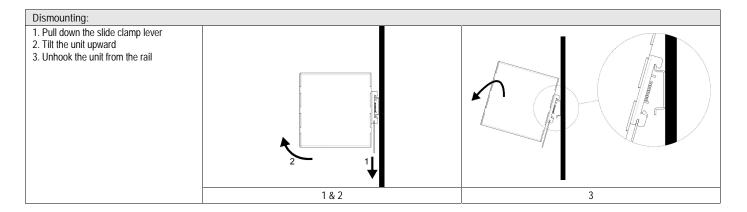

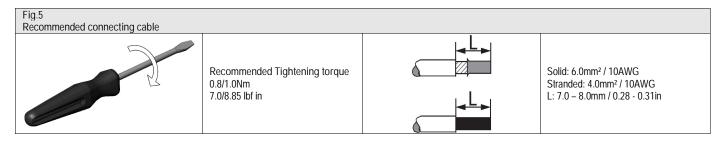


Fig.6

Input protection Fuse AT 16A or MCB 16A C curve.

For USA and Canada, use the fuse type closest to the European equivalent type.

Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.

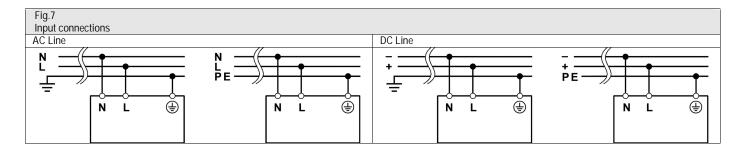


Fig.8	
Environment	
Operating temperature	Derating
- 40°C70°C	
595% r.H. non condensing	- 7.2W/°C over 45°C
UL Certified up to 45°C	- 7.2 W/ C OVER 43 C
Overtemperature protection	

Note:

- Data may change without prior notice in order to improve the product. Please refer to the latest version of the "Instruction Manual" for each product by visiting <u>www.nextys.com</u>

See also the produc	ts below that can be used in conjunction with NPSM501 units:	(accessory device)
 OR20 	20A Active ORing controller	
 OR50 	50A Active ORing controller	
 DCU20 	20A High performance DC UPS	
 BU150U 	150J Buffer Module	
 NUPS12/24 	Battery charger and DC UPS Module	
 MBC2K 	2000W Motor brake controller	
 NBP30 	Sealed Lead acid Battery pack	