

NPSW120 Series - Single or 2 Phases / DC input switching power supply -DC OK **° ∆** (€ 23...28V + Main Features: + -Single or 2 Phases input AC 187...550Vac Wide DC input range 250...725Vdc _ High efficiency and compact size ____ DC OK Only 40mm width aluminum enclosure Overload 150% WITZERLAND Up to 60°C operating temperature with no derating NPSW120-24 ĺ Usable for broad range of industrial, telecom and renewable energy application

INDEX	
	Page
Installation Requirements	2
Declaration of Conformity	2
User Instructions	3
Connections	4
Dimensions	4
Distances	4
Mounting	4
Dismounting	5
Input Connections	5
Environment	5
Accessory Device	5



READ THIS CAREFULLY BEFORE INSTALLATION!	LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE!	A LIRE ATTENTIVEMENT AVANT L'INSTALLATION!
Before operating, read this document thoroughly and retain	Prima dell'installazione, leggere attentamente questo	Lisez ces instructions avant l'installation, conservez ce
it for future reference.	documento istruzioni e conservarle per future consultazioni.	manuel pour référence future.
Non-respect of these instructions may reduce	L'inosservanza delle presenti istruzioni può compromettere le	Défaut de se conformer à ces instructions peut affecter les
performances and safety of the devices and cause danger	caratteristiche e la sicurezza dell'apparecchio e causare	caractéristiques et la sécurité du dispositif de danger et de
for people and property.	pericolo per le persone e le cose.	causer aux personnes ou aux biens.
The products must be installed, operated, serviced and	Il prodotto deve essere installato, utilizzato e riparato da	Les produits doivent être installés, exploité et entretenus par
maintained by qualified personnel in compliance with	personale qualificato e nel rispetto delle normative vigenti.	personnel qualifié et en conformité avec les règlements.
applicable standards and regulations.	Non aprire il prodotto, esso non contiene componenti sostituibili,	N'ouvrez pas le produit, il ne contient aucune pièce réparable,
	il guasto del fusibile interno (se previsto) è causato da un	le déclenchement du fusible interne (le cas échéant) est
components, the tripping of the internal fuse (if included) is	guasto interno. Non tentare di riparare o modificare il prodotto,	causé par un défaut interne. Ne pas essayer de réparer ou
caused by an internal failure.	se durante il funzionamento si verificano guasti o anomalie,	modifier le produit ; si des défaillances se produisent pendant
Don't repair or modify the device, if malfunction or failure	inviarlo al produttore per il controllo.	le fonctionnement ou les dysfonctionnements, le retourner au
should occur during operation, send unit to the factory for	Nextys SA non si assume nessuna responsabilità per	fabricant pour inspection. Nextys SA n'assume aucune
inspection. No responsibility is assumed by Nextys SA for	qualunque conseguenza derivante dall'uso di questo materiale.	responsabilité des conséquences éventuelles découlant de
any consequences deriving from the use of this material.		l'utilisation des produits.
CAUTION	ATTENZIONE	AVVERTISSEMENT
RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL	RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA,	RISQUE DE BRULURES, EXPLOSION, INCENDIE,
SHOCK, PERSONAL INJURY.	LESIONI GRAVI.	ELECTROCUTION, DOMMAGE AUX PERSONNES.
Never carry out work on live parts! Danger of fatal injury!	Non effettuare mai operazioni sulle parti sotto tensione! Pericolo	
The product's enclosure may be hot, allow time for cooling	di lesioni letali! Il contenitore può scottare, lasciar quindi	tension! Danger de mort! Le récipient peut produire des
product before touching it. Do not allow liquids or foreign	raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi	brulures, le laisser refroidir avant de toucher l'appareil. Ne
	o oggetti estranei nel dispositivo.	faites pas pénétrer des liquides ou des corps étrangers dans
	Per evitare scintille, non collegare o scollegare	l'appareil. Pour éviter des étincelles, ne pas connecter ou
before having previously turned-off input power and wait for	l'apparecchiatura prima di avere tolto tensione di ingresso e	déconnecter l'équipement jusqu'à ce que vous avez supprimé
internal capacitors discharge (minimum 1 minute).	prima che sia avvenuta la scarica dei condensatori interni (min.	la tension d'entrée et avant qu'elle n'ait lieu de décharge des
	1 minuto).	condensateurs internes (minimum 1 minute).

DECLARATION OF CONFORMITY

		DECEARATION OF CONT			
SWITZERLAN www.nextys.co	D Phone: +41-(0)	d 6, 6572 Quartino - Switzerland)91 840 14 46 / 840 14 48; Fax: +41-(0) extys.com	91 840 14 47		
	bility that the device incl	Standard EN45014 "General criteria for luded in this box, has passed all proces cifications.			nity with the product
REACH compliance: the product re	espects the EC requiren	ents related to ROHS substances, acco nents related to REACH SVHC directive s, NEXTYS SA. has not run any test to e	e (EČ) 1907/2006		er document 2011/65/UE
		Reference standards, if not expressly incomence standards a w.nextys.com the reference standards a		documents or files, they ha	ave been tested through
NPSW120-24 Single or 2	Phases switching power Phases switching power	er supply IN 200 - 500Vac (250 - 725Vd er supply IN 200 - 500Vac (250 - 725Vd er supply IN 200 - 500Vac (250 - 725Vd CCULDUS	lc) / OUT 24Vdc - 5A		Ph
		IND.CONT.EQ. 4WX9		KOHS 2011/65/EU	lead-free
Reference standards	2014/35/EU 2014/30/EU EN60950-1 UL508 EN61000-6-2 - EN61000-4-2 - EN61000-4-3 - EN61000-4-3 - EN61000-4-5 - EN61000-4-11 EN61000-6-3 - EN55011	(Low Voltage Directive) (EMC directive) (Safety Standards) (Certified - IND. CONT. EQ. 4WX9 (Generic immunity standard for ind (Electrostatic discharge immunity t (Radiated, radio-frequency, electro (Electrical fast transient/burst immu (Surge immunity test) (Voltage dips, short interruptions a (Generic emission standard for res (CISPR11 - EMC)	lustrial environments) est) imagnetic field immunity tes unity test) nd voltage immunity test)	st)	
	1	· /		The product m	

Date: 16.05.2018

Place: Quartino, Switzerland

The product manager

M *Cimica* Marius Ciorica



USER INSTRUCTIONS


1) Description: DIN rail mountable primary switched-mode power supply with 187...550Vac (250...725Vdc) input, suitable for Single or 2 Phases main line and DC line. 2) Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3). The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping. The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8) 3) Connections: the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute) In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures of: 60°C for ambient up to 45°C 75°C for ambient up to 60°C 90°C for ambient up to 70°C Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5) 4) Input protection: the device input is provided with varistors against overvoltage. Input isn't provided with internal fuses, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6). For operation on a single-phase or 2 phases system, a protection fuse on each phases must be provided. Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations. 5) AC input connection: the device can be connected to single-phase AC lines with Uin 230Vac and 2 Phases line with Uin 200...500Vac (see Fig.7). Please connect first the PE. 6) DC input connection: connect L terminal to (+) positive pole, N terminal to (-) negative pole and L terminal to GND. Rated voltage 250...725Vdc. The device is also suitable for photovoltaic or wind turbine applications (see Fig.7). For UL applications use up to 500Vdc. 7) Output connection: The device is suitable for SELV and PELV circuitry. Uout can be adjusted with a potentiometer to a wide range (see Fig.1) Check Uout before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power. 8) Parallel connection and redundancy: power supplies can be connected in parallel to increase power. Uout must be set uniformly (±100mV) on each power supply and the wiring must be symmetrical to ensure an equal current distribution. Models with "P" suffix have an integrated ORing circuit. For redundant connection, use the Models "P" or an external isolating device must be used (see accessory device). 9) Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). OL and SC: are controlled by a hiccup mode auto-reset protection with the following behaviour. OL behaviour: Max. OL = In x 1.5 with constant output voltage for > 30s. If the current is | In x 1.5 the unit enters the OL protection and starts an ON/OFF cycle (hiccup mode). SC behaviour: the device supplies the indicated short circuit peak current for 400ms if the output current exceeds In x 1.5 the device enters into a controlled ON/OFF cycles (hiccup mode). The output voltage drops to a voltage value depending on the impedance of the failed load circuit. Output OV circuit protection: the output is protected against potential OV due to internal malfunction or coming from the load for Uout Unom x 1.2 – 1.3, depending on the model OT protection: turns off the device if the internal temperature exceeds a safe limit. The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8)


10) Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device).

NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.

11) Operation with Battery: when a battery is connected in parallel to the Output for backup purposes (see accessory device).



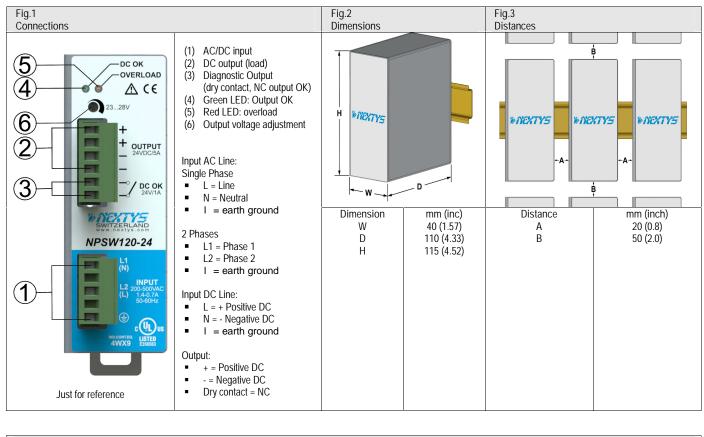

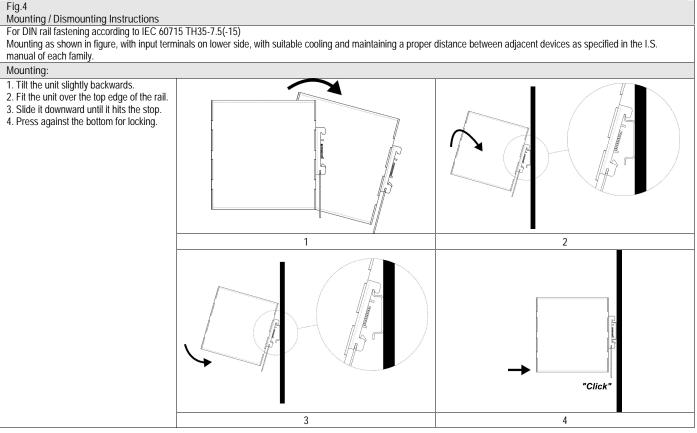

NPSW120 Series Instruction Manual



